

# Memory Card Replacement Instructions

Follow the instructions in this sheet carefully. Failure to follow these instructions could damage your equipment and void its warranty.

**Note:** Written and video instructions covering customer-installable parts are available at <http://www.info.apple.com/installparts/>.

**Warning:** During this procedure, keep small parts away from children.

## Tools Required

The following tools are required for this procedure:

- Coin
- Black stick (or other nonconductive nylon or plastic flat-blade tool)

## Opening the Computer

**Warning:** Always shut down your computer before opening it to avoid damaging its internal components or causing injury. After you shut down the computer, the internal components can be very hot. Let the computer cool down before continuing.

1. Place your computer on a clean, flat surface.
2. Shut down your computer and wait five minutes before continuing.
3. Unplug all cables from the computer.

4. Turn over the computer, and use a coin to release the battery lock. **(Figure 1)**
5. Lift the battery out of the battery bay.

**Figure 1**



6. Touch a metal surface inside the battery bay to discharge static electricity built up on your body. **(Figure 2)**


**Important:** To avoid electrostatic discharge, always ground yourself by touching the inside of the battery bay before you touch any parts or install any components inside the computer. To avoid static electricity building back up in your body, do not walk around the room until you have completed the installation and closed the computer.

**Figure 2**



7. Remove the four 2.5-mm long screws from the memory door. **(Figure 3)**
8. Use a black stick to lift off the memory door.

**Figure 3**

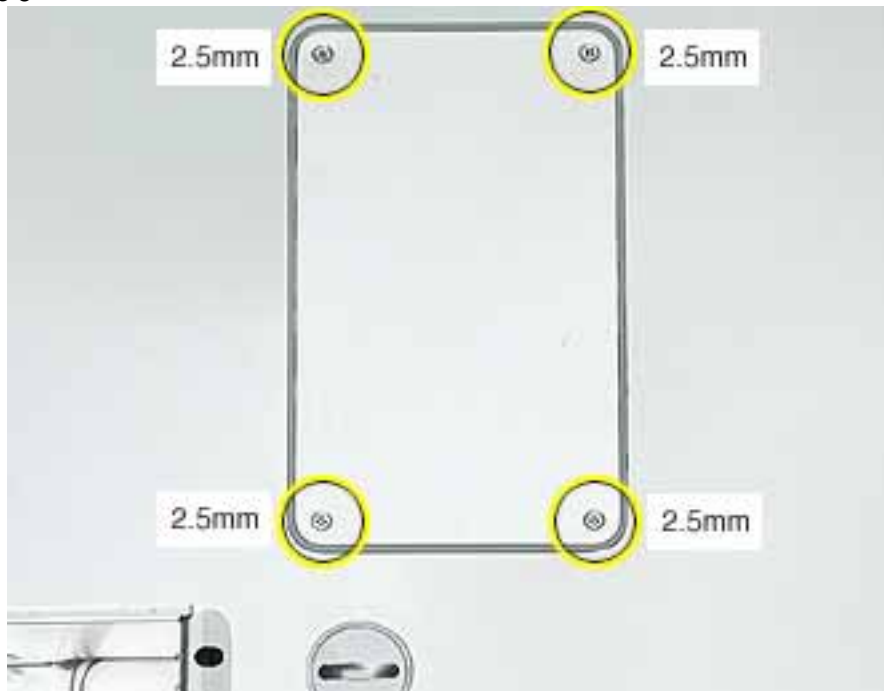

---

## Removing the Installed Memory Card

If a memory card is already installed, release it by spreading apart the tabs in the expansion slot from the notches in the card. Allow the card to pop up slightly, and pull it out of the memory slot. **(Figure 4)**

**Figure 4**



## Installing the Replacement Memory Card

1. Insert the replacement memory card into the expansion slot at a 30-degree angle. **(Figure 5)**

**Figure 5**



2. Make sure the memory card is fully inserted. Check that the notches in the card clear the tabs as you press down on the sides of the card to lock it into place. **(Figure 6)**

**Figure 6**



- 
3. Install the memory door back onto the bottom case. **(Figure 7)**

**Figure 7**



## **Closing the Computer**

1. Install the battery back in the battery bay.
2. Reconnect all cables and restart your computer.

**Warning: Never turn on your computer unless all of its internal and external parts are in place and it is closed. Operating the computer when it is open or missing parts can damage your computer or cause injury.**

---

 **Apple Computer, Inc.**

© 2003 Apple Computer, Inc. All rights reserved.

This document is protected under U.S. Copyright Law and International Treaties, and no part of this document may be reproduced in any form without written permission from Apple.

Apple is not responsible for typographical, printing, or inadvertent errors.

Apple Computer, Inc.  
1 Infinite Loop  
Cupertino, CA 95014-2084  
USA  
+ 1 408 996 1010  
<http://www.apple.com>

Apple and the Apple logo are trademarks of Apple Computer, Inc., registered in the U.S. and other countries. PowerBook and AirPort are trademarks of Apple Computer, Inc.